



INSTRUCTION MANUAL

HIGHLINE™

Codes:

HP-HX4-COMP
HP-HX5-COMP
HP-HX6-COMP
HP-HX7-COMP



English

INSTR-HIGHLINE



Please read and make sure you understand all of the safety warnings and precautions prior to using your Power Pole.

1 Safety Warnings & Precautions

Safety Warnings & Precautions

The user of this accessory is responsible for reading, understanding and following all warnings and precautions prior to operation. Failure to follow all warnings and precautions may result in property damage, serious personal injury, or death.

- NEVER use near power lines.
- NEVER extend or retract pole while spraying or while under pressure. Stop the equipment and relieve pressure before making any adjustments to the pole.
- NEVER change nozzles or accessories while under pressure. Stop the equipment and relieve pressure before making any changes.
- NEVER use while on ladders or scaffolding.
- NEVER use with unapproved accessories.
- NEVER exceed rated pressure or volume.
- NEVER use high-pressure to clean people or animals.
- NEVER remove or alter warning labels or identification tags.
- NEVER use power pole if any signs of visible damage to the pole.
- NEVER operate the pole with the largest section removed.
- ALWAYS read, understand and follow operation instructions
- ALWAYS make certain area is clear of obstructions or hazards
- ALWAYS maintain proper balance and control of power pole.

DO NOT remove or deface the warning label on the HighLine Power Pole. If the label becomes damaged or unreadable please call for a no charge replacement.

It is recommended to use a support pole for all high pressure cleaning work undertaken at heights above 10-metres (30 feet), to ensure stability of the power pole is maintained. If uncertain, ask for advice.



Danger Electric Shock Warning

- Do not use on or near electrical wiring of any kind.
- Keep at least 10 feet (3mtrs) away from power lines.
- Do not touch or aim spray at electrical wiring of any kind.
- Do not operate from ladders or elevating devices of any kind.
- Operator must maintain both feet on solid ground.

2 Operating Your Pole

Operating Your Pole

Assembly

All **HIGHLINE™** power poles require some final assembly.

To protect the coupler and lance during shipping, these parts are shipped strapped to the extension pole. Release the strapping and insert the aluminium end into the top clamp and pull the lever down to secure it in position. Attach nozzle supplied with the pole to the quick coupler and ensure the coupler collar releases to grip the nozzle.

To Use Your Power Pole

Connect the outlet of your pressure washer to the inlet port of the trigger gun of the **HIGHLINE™** Power Pole using appropriate quick couplers or fittings rated to handle high pressure.

DO NOT bypass, disable, or remove the trigger gun.

The **HIGHLINE™** Power Pole may be used fully retracted or fully extended or at any point in between. Caution must be used when the pole is extended as the reaction force of the nozzle spraying will cause the pole to flex.

Make absolutely certain that there are no power lines or sources of electrical power within 10 feet of the lance at any time.



Warning

Contact with power transmission lines can cause fatal electrocution!



Caution

Do not extend or retract your **HIGHLINE™** Power Pole while spraying or under pressure. Stop the equipment and relieve any pressure before making adjustments to the extension pole or changing nozzles.

To Extend The Pole

Lift the pole levers and extend the pole section by section, starting from the second lever down. Clamp each section once the desired length is attained. The first lever must remain locked at all times to ensure constant grip is maintained on the aluminium insert holding the nozzle assembly.

To Retract The Pole

Lift the pole levers and slide the sections in starting from the second last section until the pole is fully compressed and then clamp each section securely again.

To Begin Spraying

- Start the pressure washer.
- Raise the pole and keep the nozzle at least ten feet away from the surface to be cleaned. Keep the pole clear of any power lines. Squeeze the trigger to begin spraying, maintain stable footing, and move the pole in to the surface to be cleaned.



Caution

Except in cases of emergency, do not release the trigger whilst nozzle is near to any surfaces.

To Stop Spraying

Before releasing the trigger gun move the nozzle at least ten feet away from the surface being cleaning and make sure you have solid footing.



Caution

The pole will rebound when the trigger is released or if pressure is lost, **USE EXTREME CAUTION** when working on or near fragile surfaces as there may be enough force to damage surfaces or break windows. Keep clear of power lines. When you are clear of the work surface and in a safe area - release the trigger.

STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If **STREAMLINE®** receives notice of such defects during the warranty period, **STREAMLINE®** will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by **STREAMLINE®**.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by **STREAMLINE®**.

The customer is responsible for the cost of return of the defective part. If warranty is approved, **STREAMLINE®** will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of **STREAMLINE®**:

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by **STREAMLINE®**, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to **STREAMLINE®**.

This warranty constitutes the exclusive remedy of any purchaser of a **STREAMLINE®** unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and **STREAMLINE®** shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Hamilton House, 8 Fairfax Road,
Heathfield Industrial Estate,
Newton Abbot
Devon, TQ12 6UD
United Kingdom

Telephone: +44 (0) 1626 830 830

Email: sales@streamline.systems

Visit: www.streamline.systems

INSTR-HIGHLINE