



INSTRUCTION MANUAL

OVA8

Codes:

OV17-24-E

to

OV60-40-E



English

INSTR-OVA8

Thank you for purchasing a OVA8® telescopic pole from us.

To gain the most value from your purchase we recommend that you read the following instructions and maintenance notes carefully, and store this document in a safe place for future reference.

Extending the pole

- Extend the pole by beginning with the thinnest section first.
 - Ensure the clamp lever is fully open before extending each section.
 - Secure the extended section by closing the clamp lever fully.
 - Continue to lengthen the pole by extending each section, one at a time, until the desired height is achieved.
 - Although the pole sections have stopper tape fitted, be careful not to over-extend each section.
- Collapse the sections carefully in order to avoid pinching fingers when the clamps come together.
 - If the pole has become wet during use, e.g., underwater used or in inclement weather conditions, dry each section prior to collapsing and storing the pole.

Important points to remember

- Always operate the pole with both feet on the ground to maintain proper balance and control of the pole (care should be taken if using the pole on an uneven surface).
- Use both hands when extending and collapsing the pole.
- To improve the pole's rigidity, and if full extent is not required, leave the thinnest section collapsed and extend the pole from the second section down. Alternatively, increase the overlap of each section, by not extending them completely.
- It is recommended that the pole is collapsed prior to moving or repositioning it.

Collapsing the pole

- Ensure the clamp lever is fully open before collapsing each section in order to avoid premature wear to the sections.
- Open the clamp lever and carefully control the speed at which the sections descend, so as not to jar the clamps as the pole closes.

CAUTION

- Never remove the base section of any carbon fibre pole as these are manufactured from glass fibre to insulate the pole – danger of electrocution, should the pole touch an overhead wire or electrical source.
- Never use the telescopic pole if damage has occurred to any of the sections.
- Be aware of overhead obstacles and electrical cables prior to extending the pole.
- It's advised that when deploying the pole, to use the height of the pole plus an additional 10% as an horizontal safe distance from any overhead electrical wires, telephone wires, people or animals.

Maintenance

- Make sure that the pole is dry after use and before storing it.
- A dry PTFE spray can be used on the sections to ensure a smooth operation, if required.
- Ensure the clamp tensions are maintained sufficiently in order to prevent premature wear to the pole sections.
- Tension the clamp screws if the sections become loose.
- If the base cap of the pole becomes worn, replace it as soon as possible to avoid sections from becoming damaged and / or splitting.

Why STREAMLINE®?

Flexibility

- **STREAMLINE®** systems can be built according to customers' exact requirements
- For non-standard systems, the user's needs or specifications are listened to and turned into reality.

Quality

- Whilst price is important, quality is remembered long after price is forgotten
- We insist on sourcing brand name products from around the world, only of a reputable quality, and bring them together under the **STREAMLINE®** name
- All **STREAMLINE®** products carry a full one year's warranty, according to the manufacturers' standard terms and conditions of sale.

Service

- We have an in-house technical helpline able to answer most of your questions relating to the capabilities and functionalities of all **STREAMLINE®** products
- If we get it wrong, we will put it right. If you are sent a wrong item, we will immediately attend to sending you the correct item and arrange a collection of the wrong item without any quibbles
- **STREAMLINE®** is backed by a comprehensive range with massive stocks providing you with a 'one stop shop' for all your requirements.



Manufactured
In the
United Kingdom



Checked and
Tested by
Quality control

Warranty Information

STREAMLINE® Warranty

The warranty on all Machines and Equipment is for 1 year (12-months) from RECORDED DATE OF PURCHASE.

THIS WARRANTY EXCLUDES NORMAL MAINTENANCE ITEMS, including but not limited to HOSES, FILTERS, O-RINGS, DIAPHRAGMS, VALVES, GASKETS, CARBON BRUSHES and damage to motors and other components as a result of failure to replace normal maintenance items. THIS LIST IS NOT EXHAUSTIVE.

If **STREAMLINE®** receives notice of such defects during the warranty period, **STREAMLINE®** will either, at its opinion, repair or replace components which prove to be defective.

Replacement parts will only be supplied under warranty, upon the inspection and approval of the defective parts by **STREAMLINE®**.

Should it be necessary to supply replacement parts before the opportunity to inspect, these will be charged at current prices and credit will only be issued upon subsequent inspection and warranty approval by **STREAMLINE®**.

The customer is responsible for the cost of return of the defective part. If warranty is approved, **STREAMLINE®** will pay for the cost of the repaired or replacement part.

This warranty excludes the following conditions and circumstances which are at the discretion of **STREAMLINE®**:

Wear and tear, misuse, abuse improper maintenance, frost damage, the use of chemicals other than those supplied or approved by **STREAMLINE®**, improper installation or repair, unauthorised modification, incidental or consequential costs, loss or damage, service, labour or third party charges, the cost of returning defective parts to **STREAMLINE®**.

This warranty constitutes the exclusive remedy of any purchaser of a **STREAMLINE®** unit and is in lieu of all other warranties, express or implied, including without limitation any implied warranty of merchantability or fitness for use, to the fullest extent permitted by law. In no event shall any implied warranty of merchantability or fitness for use exceed the term of the applicable warranty stated above and **STREAMLINE®** shall have no other obligation or liability.

Important

Unfortunately these rights cannot be transferred to a third party.



Hamilton House, 8 Fairfax Road,
Heathfield Industrial Estate,
Newton Abbot
Devon, TQ12 6UD
United Kingdom

Telephone: +44 (0) 1626 830 830
Email: sales@streamline.systems
Visit www.streamline.systems

INSTR-OVA8